

User Manual


B10A-20 Power Bank with Built-in Cable

Model: HKCPB2010B1

Preface

Thank you for purchasing the Huntkey products. For optimum operation, please read this manual carefully before using.

Package Contents

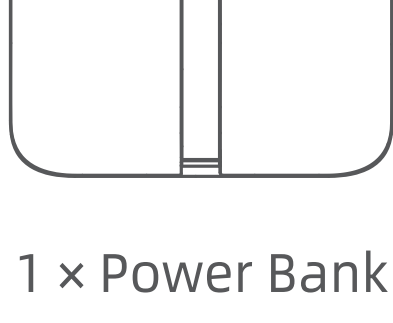


1 × Power Bank



1 × User Manual

Product Overview

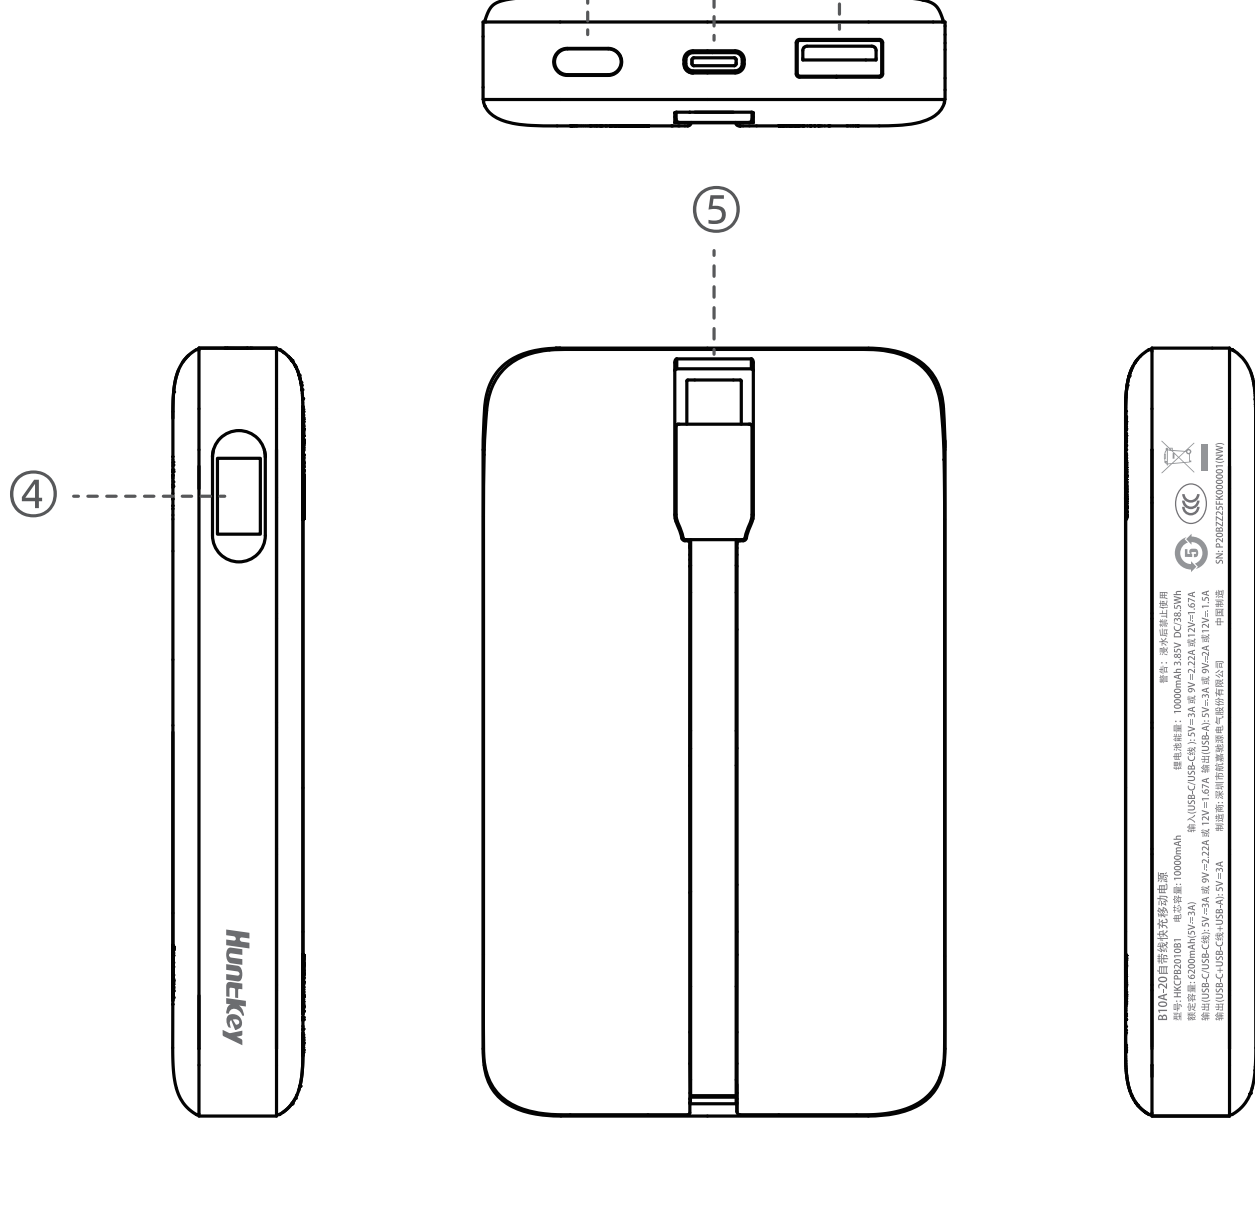

① Power Button ② USB-C Input/Output Port ③ USB-A Output Port

④ LCD Screen ⑤ USB-C Input/Output Cable

Specifications

Dimensions	116.4*70*19.7mm
Battery Type	Lithium-ion polymer battery
Battery Capacity	10000mAh
Lithium battery energy	10000mAh 3.85V DC/38.5Wh
Rated Capacity	6200mAh(5V---3A)
Input(USB-C/USB-C Cable)	5V---3A or 9V---2.22A or 12V---1.67A
Output(USB-C/USB-C Cable)	5V---3A or 9V---2.22A or 12V---1.67A
Output(USB-A)	5V---3A or 9V---2A or 12V---1.5A
Output(USB-C+USB-C Cable+USB-A)	5V---3A
Charging Cable	About 110 mm/USB-C
Product Weight	200g(approximation)
Operating Temperature	-5°C~35°C
Storage Temperature	-20°C~50°C
Charging Time	About 3 hours (using a 20W power adapter)

Instructions

- Please fully charge the product before its first use.
- Please don't use all-in-one cables to charge multiple devices at the same time, as it may damage your devices.
- For optimal performance, we recommend that you use Huntkey accessories such as 20W(or above) PD charger.
- Stop all use if the battery is swollen, leaking or deformed.
- Stop all use if the battery is submerged.
- Electric Quantity: Press the power button at the bottom, and the LCD screen will display the percentage of remaining electric quantity. Double-click the power button quickly to close the screen display.
- Low Current Charging Mode: Press the power button for more than 3 seconds, and the USB-C port will start the low current charging mode, which is for charging low-power devices such as wristbands and earphones.
- Please keep the product out of reach of children.
- When not in use, store the product in dry environment. To preserve lifespan, recharge and discharge it every 3 months.

Cautions

- Do not expose the product to excessive temperature or areas which may become hot, including but not limited to, on or near vehicles, space heaters, cooking appliances like oven.
- Use unapproved or incompatible power adapters, cables may result in fire, explosion or other hazards.
- Do not store the product in a restricted ventilation area like handbag for a long time, a closed-in area may result in fire or other hazards.
- The product contains a Lithium-ion battery. Disassembling product may cause property damage or fire.
- Do not drop, crush, puncture, short-circuit, or dispose of the product in fire or water.
- Disposal of the product separately from household waste, following local regulations.
- Do not use the product during a thunderstorm, it may cause malfunctions or electric shocks.

Warranty Description

If there is a failure caused by non-man-made reasons, consumers who purchased Huntkey products through legal channels can enjoy product warranty services within 12 months from the date of purchase. In order to ensure your legitimate rights and interests, please keep in mind the following :

(1) The warranty card should be properly kept by the user. No replacement if lost. Invalid if altered.

(2) If there is a failure caused by non-man-made reasons, the user can use the warranty card and the purchase certificate for free maintenance at the designated maintenance point during the warranty period.

The following are not covered by warranty services:

- The product exceeds the warranty period;
- Damage caused by human factors;
- The warranty card model does not match the product model;
- There is no warranty card or the warranty card has been altered;
- There is no valid purchase certificate or no proof that the purchased product is within the warranty period;
- Unauthorized maintenance, violent operation, disassembling, modification, excoriation, liquid inlet, corrosion;
- Damage caused by force majeure such as flood, fire, lightning strike.

If the warranty service is void, the maintenance service is still required, Huntkey will calculate the appropriate maintenance fee according to the cost of parts and labor, make a maintenance quote to the user, and then provide maintenance services after obtaining the user's consent and payment.

Warranty Card

Dear users, thank you for using Huntkey's products. In order to better serve you, please read, fill out and properly keep this warranty card after purchasing the product.

Name _____

Address/Zip Code _____

Phone Number _____

Product Model _____

Product Serial Number _____

Date of Purchase _____

Invoice Number _____

Name of Marketing Unit _____

Add/Phone of Marketing Unit _____

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

